



iView – Device Association


1. Open the patient's medical record in *PowerChart*.
2. Open the *Interactive View (iView)* Tab found in the *Patient Menu* on the left.

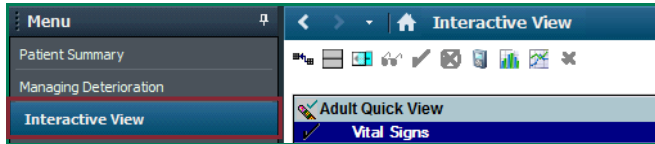



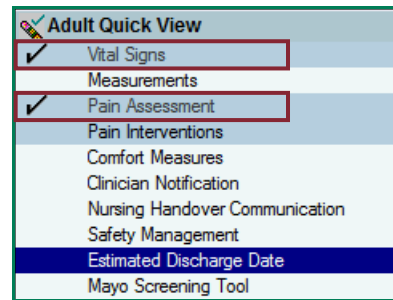
3. Click on the *Associate Device*  Icon

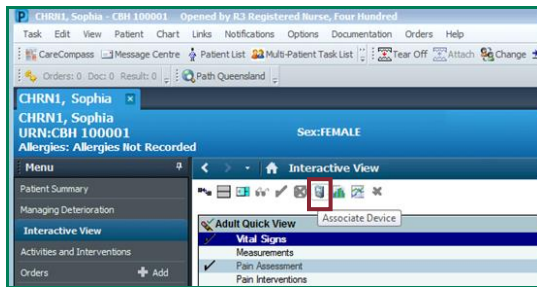

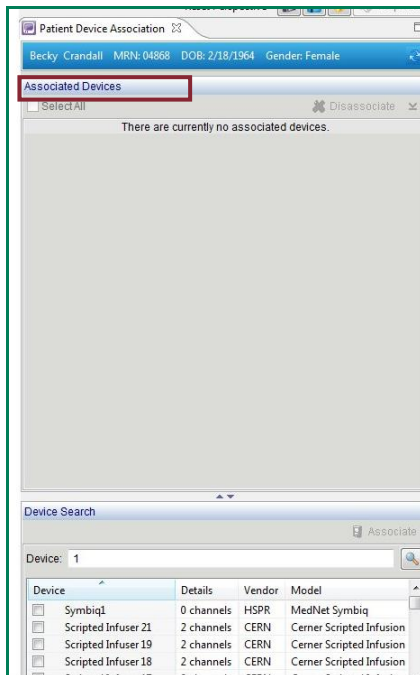

4. This opens the *Patient Device Association* window.
5. Use the barcode scanner to read the barcode on the device.
6. This will place the identification for the device into the *Associated Devices* area.



7. Click on the device you wish to associate.
8. Click *OK* .
9. You will now see the device data has been placed into the relevant *Band* and *Section* in *Interactive View*. *Sections* with data entered will show a tick .



10. When you are satisfied the results are correct click *Sign* .



The observations are in purple when they initially land in *Interactive View*. This indicates the data is not signed and not saved in *Interactive View* and the *Patient Medical Record*.

You must check and sign.