



Single Patient Label and Wrist Band Printers

Wristband Printer

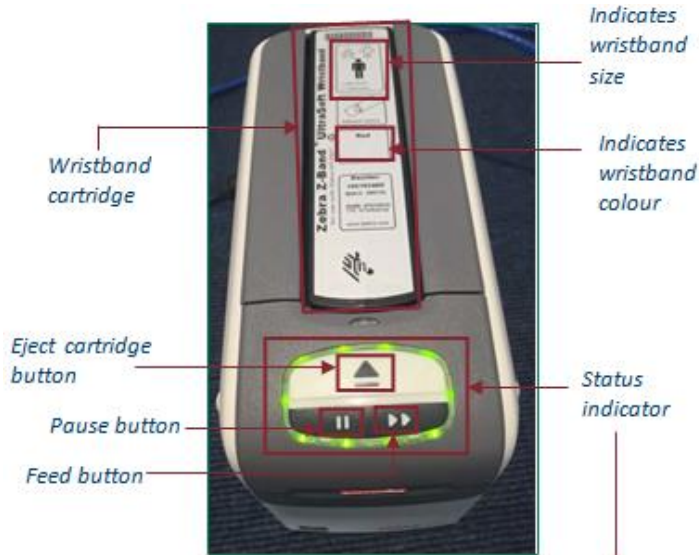

	Indicates adequate cartridge level
	Indicates cartridge is low
	Indicates cartridge is empty

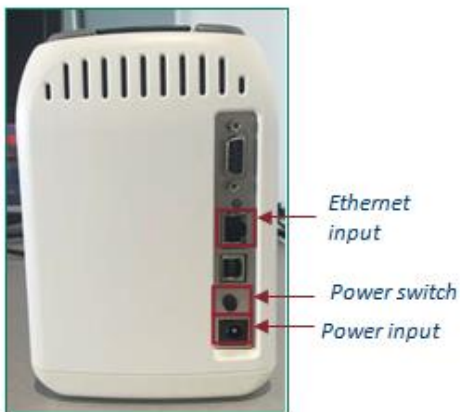

1. Load the printer with a new or different cartridge press the eject cartridge button
2. Remove the cartridge from the slot
3. Insert the new cartridge and push down

Single Patient Label Printer



1. Load the printer with labels pull the release levers on both sides towards you and lift the cover
2. Open the media guides
3. Lower the roll between the roll holders and thread the roll through the guide
4. Orient the roll so that the labels face up as it passes through the guides
5. Lower the top cover when finished

